


# MOTOR MOUNT SPACER REPLACEMENT INSTRUCTIONS

1. Remove screws holding motor plate to top of valve. Set aside screws and motor plate (with motor attached).


Remove Screws

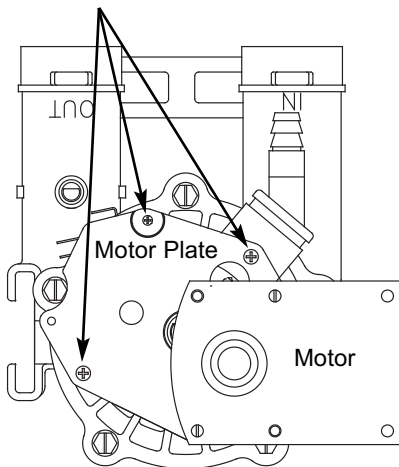

2. Leaving switch in place, remove and discard old spacer (it may already have dropped out when screw was removed).


Switch

Remove Old Spacer

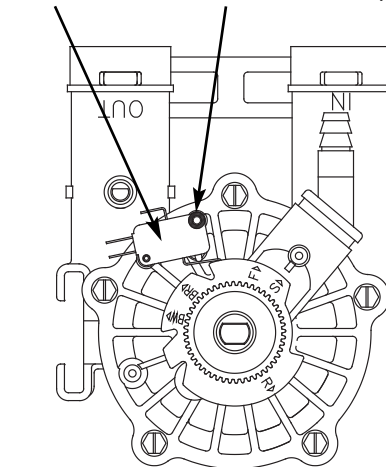

3. Install new motor mount spacer on switch and valve cover where shown below. Reinstall the motor plate (removed in Step 1).

New Motor Mount Spacer

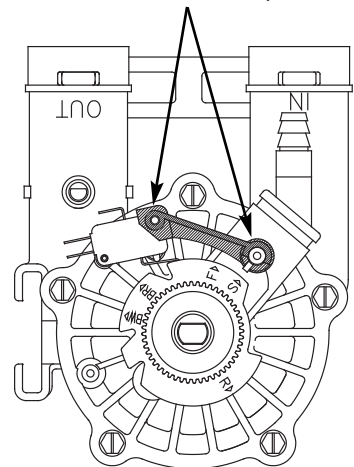


7325697 (Rev. A 3/22/11)

# MOTOR MOUNT SPACER REPLACEMENT INSTRUCTIONS

1. Remove screws holding motor plate to top of valve. Set aside screws and motor plate (with motor attached).


Remove Screws

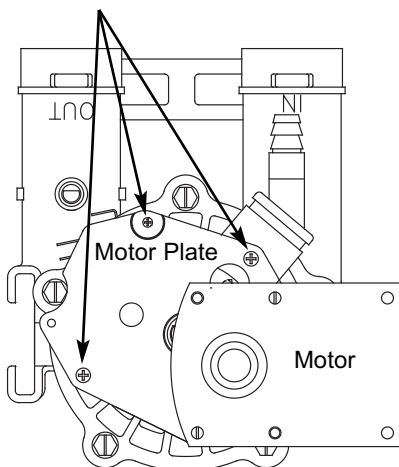

2. Leaving switch in place, remove and discard old spacer (it may already have dropped out when screw was removed).


Switch

Remove Old Spacer

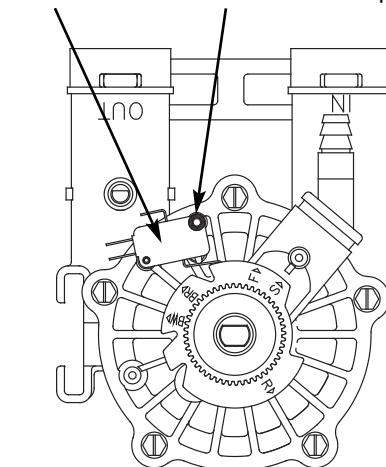

3. Install new motor mount spacer on switch and valve cover where shown below. Reinstall the motor plate (removed in Step 1).

New Motor Mount Spacer

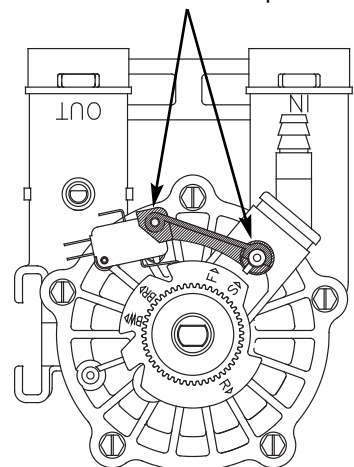

7325697 (Rev. A 3/22/11)